



FOR DISPLAY VERSION : NOT USED

RECEIVER: RX-433M2Z (RX433N)

RECEIVER: LM211

RECEIVER: SHF6155

RECEIVER: DCDC isolated 12V-5V

RECEIVER: LM358

RECEIVER: LM7905

RECEIVER: MP22003

RECEIVER: DCDC #1 12V TO 5V2A5

RECEIVER: 12V input

RECEIVER: Vout=0.9*(68k+13k)/13k=4.98V

RECEIVER: PHONE LINE

RECEIVER: USB

RECEIVER: 18F4550

RECEIVER: AT

RECEIVER: TP25

RECEIVER: TP26

RECEIVER: TP27

RECEIVER: TP28

RECEIVER: TP29

RECEIVER: TP30

RECEIVER: TP31

RECEIVER: TP32

RECEIVER: TP33

RECEIVER: TP34

RECEIVER: TP35

RECEIVER: TP36

RECEIVER: TP37

RECEIVER: TP38

RECEIVER: TP39

RECEIVER: TP40

RECEIVER: TP41

RECEIVER: TP42

RECEIVER: TP43

RECEIVER: TP44

RECEIVER: TP45

RECEIVER: TP46

RECEIVER: TP47

RECEIVER: TP48

RECEIVER: TP49

RECEIVER: TP50

RECEIVER: TP51

RECEIVER: TP52

RECEIVER: TP53

RECEIVER: TP54

RECEIVER: TP55

RECEIVER: TP56

RECEIVER: TP57

RECEIVER: TP58

RECEIVER: TP59

RECEIVER: TP60

RECEIVER: TP61

RECEIVER: TP62

RECEIVER: TP63

RECEIVER: TP64

RECEIVER: TP65

RECEIVER: TP66

RECEIVER: TP67

RECEIVER: TP68

RECEIVER: TP69

RECEIVER: TP70

RECEIVER: TP71

RECEIVER: TP72

RECEIVER: TP73

RECEIVER: TP74

RECEIVER: TP75

RECEIVER: TP76

RECEIVER: TP77

RECEIVER: TP78

RECEIVER: TP79

RECEIVER: TP80

RECEIVER: TP81

RECEIVER: TP82

RECEIVER: TP83

RECEIVER: TP84

RECEIVER: TP85

RECEIVER: TP86

RECEIVER: TP87

RECEIVER: TP88

RECEIVER: TP89

RECEIVER: TP90

RECEIVER: TP91

RECEIVER: TP92

RECEIVER: TP93

RECEIVER: TP94

RECEIVER: TP95

RECEIVER: TP96

RECEIVER: TP97

RECEIVER: TP98

RECEIVER: TP99

RECEIVER: TP100

NE : not equipped

Fcallbox 2015